

Oilsky

USER MANUAL

DIGITAL PLAYER



M303 Pro

Thanks for your purchase!
Welcome to download manuals at www.oilsky.com.cn
Any after sales service needed, please feel free to contact us
✉ oilskyservice@hotmail.com

Contents

English	01-05
Deutsch.....	06-10
Français.....	11-15
Italiano.....	16-20
Español	21-25
日本語.....	26-30

Buttons Introduction

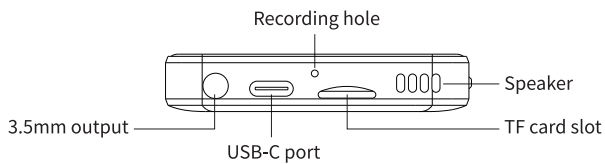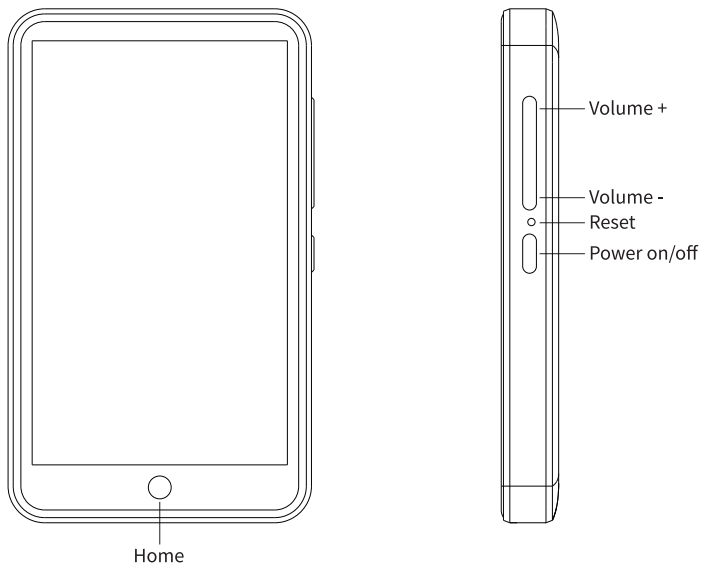

Attention

- 1.If the APK you downloaded cannot be installed on this item, please change to a lower version of the APK.
- 2.If the device crashes, freezes, etc. Please reset the device or restore factory settings. Note: Please backup all your files before factory settings, otherwise your files will not be retrieved.
- 3.If the SD card can not be recognized, please try to format the card. If it doesn't help, please contact us (see cover) for further help.
- 4.Press and hold the "Power button" and "Volume -" button at the same time to take a screenshot.
- 5.Home button: Press once to return to the previous menu, twice to the home menu, long press to the background program.
- 6.Universal password: 1235789 (when you forget your password,enter this password to unlock the player).

Charging

- 1.Charging by wall charger or computer are both ok.
- 2.New batteries need to go through several charging and discharging processes to achieve optimal performance.
- 3.If you do not use the machine for a long time, please charge and discharge it at least once in a month to prevent the battery from being damaged by over consumption.

Gesture Operations

Long press: press the icons for 2 seconds. Long press the blank area of the main screen to access to the main screen editing status.

Slide: Slide fingers on the screen.

Drag: Long press the icon and drag it to other position.

Settings

WIFI

Turn on WLAN (you can also swipe down at the status bar to open the notification panel and set the WIFI), tap on the WLAN you're going to connect.

If you select an encrypted network, a password should be input.

Bluetooth

Turn on Bluetooth, the device will automatically searching the available devices.
Select the Bluetooth device and finish pairing.

Apps & Notifications

List recently opened apps here. Tap on each app to uninstall or force stop.
Notifications, App permissions are available.

Battery

Charge and usage information of Battery: Standby intelligent power saving, Battery saver, Battery manager, and Battery percent.

Display

- Brightness level: to adjust the brightness of screen.
- Night light: Setting a schedule for night light status and adjust intensity of brightness.
- Simulate color space: Disabled, Monochromacy.
- Wall paper: Select from Gallery, Live Wallpapers, Wall papers.
- Sleep: if there is inactivity for 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes, 30 minutes, the screen be turned off.
- Auto-rotate screen: On/Off.
- Font size: Adjust the font size from small, Default, Large, and Largest.
- Display size: Adjust the display size from small, Default, and Large.

Sound

Set Media volume, Notification volume, Alarm volume, Default alarm sound Here.
Screen locking sound, Charging sound, Touch sounds, and Sound enhancement are available.

Storage

Display the available space and total space of internal storage and SD card, as well as the occupancy of each app.

Security

Screen lock: Set a screen lock by Swipe, Pattern, PIN, Password (Warning: When you set a password or PIN, be sure to write down it before you click Confirm. Or, you will not be able to access the device).

Passwords: Make passwords visible or not.

Encryption & Credential: Storage type, Trusted credentials, User credentials, Install from SD card.

⌚ Auto Shutdown

Set it never or auto shutdown in 5/10/15/20/30minutes.

⌚ Schedule power on&off

Set a specific time to power on/off.

⚙️ System

- Language & input: Setting languages and input method.
- Keyboard & input methods: Select Gboard to set your preferred language to input.
- Date & Time: Setting date & time of device.
- Reset options: Erase all data and reset to factory settings.
- About device: Detail information of device.

Specification

Display	4 inch, 480*800 pixels	
Internal memory	2G RAM +16G ROM	
Supported Format	Music	MP3, OGG, FLAC, AAC, WAV, WMA, APE
	Video	RM, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, TS
	Pictures	JPEG, BMP, GIF, PNG
	Ebook	TXT
	Recordings	AMR
USB port	Type-C USB2.0	
Compatible Systems	Windows 7 and the above	
Operating temperature	0-45°C (32-113°F)	
Battery	2000mAh	
Charging	5V DC, 1A	

Warning

- ⚠ Do not leave the device in an environment where the temperature is too low or too high (below -10°C or above 50°C) for a long time. Extreme temperature environments will cause the device to deform and shorten the service life of the device;
- ⚠ Do not use the equipment under thunder storm weather;
- ⚠ Do not place the device in the water for a long time;
- ⚠ Do not expose the equipment to the sun for a long time.